





Wireless remote controller
MR-EH00
MR-EH00U
MR-EC00

Air conditioner user manual



100%
Recycled Paper

This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.

EN ES FR IT PT DE EL NL PL HU RU AR DB68-04667A-01

SAMSUNG

Contents

PREPARATION

Safety precautions	3
Checking before using the product	6

BASIC OPERATION

Using the remote controller	7
Basic operation	10

TIMER

Setting the On/Off timer	13
Setting the good'sleep mode	15

OPTIONS

Using the Turbo function	17
Using the Purity function	18
Using the Quiet function	19

SETTINGS








Selecting an indoor unit	20
Selecting a blade	20

OTHERS



Appendix	21
----------------	----

Safety precautions

This content is intended to protect the user's safety and prevent property damage. Please read it carefully for correct use of the product.


 WARNING	Hazards or unsafe practices that may result in severe personal injury or death .
 CAUTION	Hazards or unsafe practices that may result in minor personal injury or property damage .
	Follow directions.
	Do NOT attempt.
	Make sure the machine is grounded to prevent electric shock.
	Unplug the appliance.
	Do NOT disassemble.

FOR INSTALLATION **WARNING**



-  The installation of this product must be performed by a qualified technician.
 - ▶ Failure to do so may result in electric shock, fire, product malfunction, explosion, or injury.
-  Do not install this product near a heater, or inflammable material. Do not install this product in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops). Do not install this product in a location where gas may leak.
 - ▶ Otherwise, electric shock or fire may occur.

Safety precautions

FOR INSTALLATION CAUTION

-  **Install the product on a hard and level place that can support its weight.**
 - ▶ If the place cannot support its weight, the product may fall down and it may cause product damage.


 
 

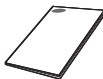
FOR OPERATION WARNING

-  **If the product generates a strange noise, a burning smell or smoke, unplug the product immediately and contact your nearest service center.**
 - ▶ Otherwise, electric shock or fire may occur.
-  **Do not attempt to repair, disassemble, or modify the product yourself.**
 - ▶ Otherwise, electric shock, fire, product malfunction, or injury may occur.

- ❗ **Do not allow water to enter the product.**
 - ▶ Otherwise, a fire or explosion may occur.
- ⊘ **Do not operate the product with wet hands.**
 - ▶ Otherwise, electric shock may occur.
- Do not spray volatile material such as insecticide onto the surface of the product.**
 - ▶ As well as being harmful to humans, it may also result in electric shock, fire or product malfunction.
- Do not give a strong impact to the product and do not disassemble the product.**
- Do not use this product for other purposes.**
 - ▶ This product is designed to be used only for a system air conditioner.
- Do not press the buttons with any sharp objects.**
 - ▶ Otherwise, electric shock or part damage may occur.
- Do not clean the product by spraying water directly onto it. Do not use benzene, thinner, alcohol or acetone to clean the product.**
 - ▶ Otherwise, discoloration, deformation, damage, electric shock or fire may occur.

Checking before using the product

Accessories

Item	Wireless remote controller	Remote controller batteries	M4XL16 screws	Remote controller holder	User manual
Quantity	1	2	2	1	1
Shape					

 


NOTE

Select the following places to install the remote controller holder.


- Where there is no interference to the remote controller signal.
- Not exposed to direct sunlight or heat source.
- More than 1 m away from a television or stereo system.

1. Mark the spots with a pencil where you will install the remote controller holder.

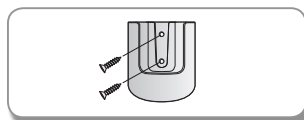

2. Drill the marked holes(2EA) for screws on the wall.

 
3. Install the remote controller holder on the wall by using the screws.

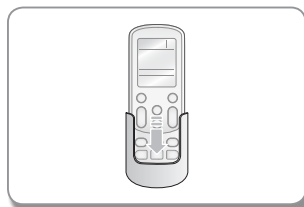

Using the remote controller

- ▶ Point the remote controller towards the remote controller receiver of the indoor unit.
- ▶ When you press the button on the remote controller correctly, you will hear beep sound from the indoor unit and a transmit indicator(📶) appears on the remote controller display.

 Remote controller buttons

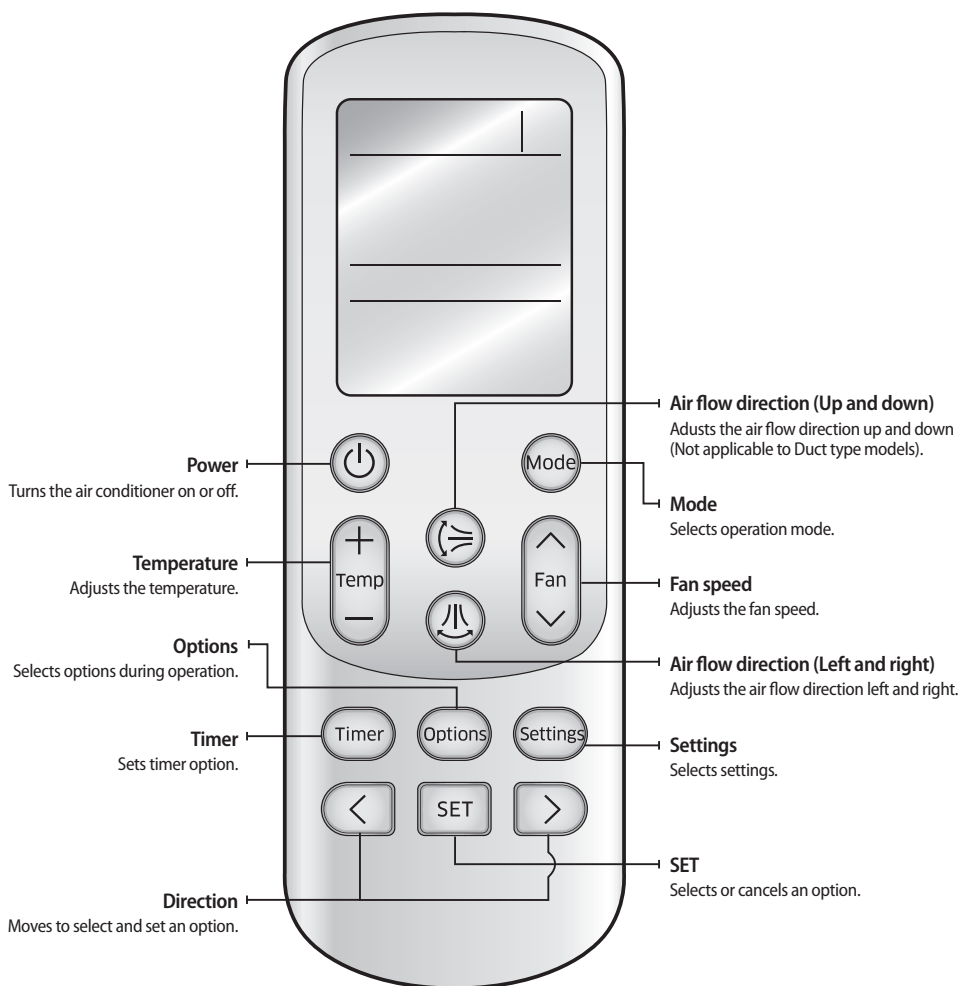


NOTE

- In case you wish to cancel the options or settings that you have just set, press the **Options** or **Settings** button again, then the most recently selected item will blink and you may simply cancel it by pressing the **SET** button while selected item is blinking.

Using the remote controller

 Remote controller display

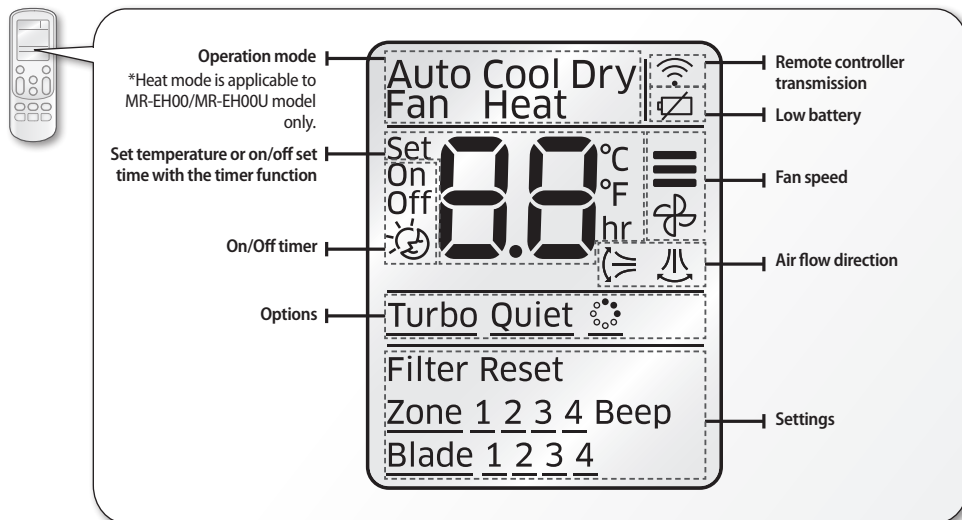

NOTE

- For MR-EH00U/MR-EC00U model, the temperature unit will be indicated by "°F" on the display.
- When turning off and turning on the remote controller, the Timer, Options and Settings set before turning off the remote controller are cancelled. However, the fan direction does not change.

Battery changing time

When the battery is exhausted, (🔋) will be displayed on the remote controller display. When the icon appears, change the batteries.


The remote controller requires two 1.5V AAA type batteries.

 
Storing the remote controller

When you do not use the remote controller for a long time, remove the batteries from the remote controller and store it in the remote controller holder.



Inserting the batteries

1. Open the battery cover of the remote controller.
 - Press the () part gently and lift it up in the arrow direction.
2. Insert the batteries.
 - Check and match the (+) and (-) signs accordingly.
3. Close the battery cover.
 - Match the cover and bottom part of the remote controller and press it until you hear click sound.

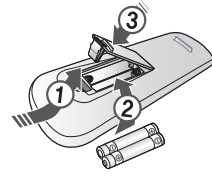

- Make sure that water is not allowed to enter the remote controller.



- There is a possibility that the air conditioner will not operate by remote controller near strong light such as a fluorescent lamp or neon sign. In this case, use the remote controller in front of the remote controller receiver of the indoor unit.
- If other electrical products are operated by the remote controller, call your nearest service center.
- **Filter reset** : When the filter reset indicator is turned on the indoor unit display, clean the filter and press the **Settings** → <, > or **Settings** → (Filter Reset) blinking → **SET** button.
- **Beep off** : To silence the beep sound, press the **Settings** → <, > or **Settings** → (Beep) blinking → **SET** button. If you press the **Settings** → <, > or **Settings** → (Beep) blinking → **SET** button again, the beep sound will ring again.



Correct disposal of batteries in this product

(Applicable in countries with separate collection systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Basic operation

Basic operation is an operation mode that can be selected by pressing the **Mode** button.

Auto

In Auto mode, the air conditioner will automatically adjust the temperature and fan speed to maintain your fresh environment.

- ▶ When the indoor temperature is too high, the powerful cool breeze is generated and when the indoor room becomes cool enough, the soft breeze is generated.

Cool

Cool mode is frequently used and you can freely control the temperature, fan speed, and air flow direction in Cool mode.

- ▶ When you select the Heat mode while the Cool mode is on, the Cool mode is cancelled.

Dry

The air conditioner in Dry mode acts like a dehumidifier by removing moisture from the indoor air. The Dry mode will provide you with fresh air even on a rainy day.

Fan

Fan mode provides you with a breeze just like a fan to make fresh environment for you.

Heat (MR-EH00/MR-EH00U)

In Heat mode, you can warm your room even in the fall and winter.


- ▶ The fan may not commence immediately to avoid generating a cold breeze.
- ▶ During the Heat mode, defrost operation may be performed to remove the frost formed on the outdoor unit. (When the frost is removed by the defrost operation in Heat mode, steam is generated from the outdoor unit.)
- ▶ If you stop operating the air conditioner after heating operation, the fan will operate for some time to cool the indoor unit.
- ▶ When you select the Cool mode while the Heat mode is on, the Heat mode is cancelled.



NOTE

 
- When the outdoor temperature is low and humidity is high during the heat mode, the outdoor unit's heating capacity may decrease due to the frost formed on the outdoor heat exchanger. The defrost operation removes the frost formed on the heat exchanger of the outdoor unit for 5 ~ 12 minutes. During the defrost operation, the indoor unit does not generate breeze in order to prevent cold breeze blowing out.
 - * The interval between the defrost operation can decrease depending on the amount of the frost formed on the outdoor unit.
 - * The interval between defrost operation can also decrease by humidity level with rain or snow.

Turning the air conditioner on

Press the  button to operate the air conditioner.


Selecting the operation mode

Press the  button to select an operation mode.

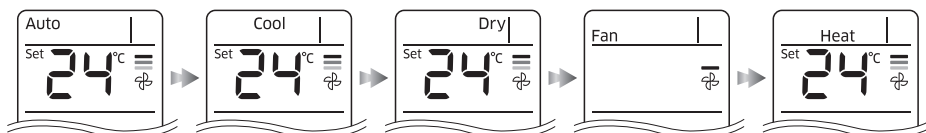


* Heat mode operates with MR-EH00/MR-EH00U model only.



 

 
 
 
 

 
 
 
 
Adjusting the temperature

Press the  button to adjust the temperature.

Auto	Temperature can be adjusted by 1 °C(1 °F) within the range of 18 °C(65 °F)~30 °C(86 °F).
Cool	Temperature can be adjusted by 1 °C(1 °F) within the range of 18 °C(65 °F)~30 °C(86 °F).
Dry	Temperature can be adjusted by 1 °C(1 °F) within the range of 18 °C(65 °F)~30 °C(86 °F).
Fan	Temperature cannot be adjusted.
Heat	Temperature can be adjusted by 1 °C(1 °F) within the range of 16 °C(61 °F) ~30 °C(86 °F).

Selecting the fan speed



Press the  button to adjust the fan speed.


Auto	 (Auto)
Cool	 (Auto),  (Low),  (Med),  (High)
Dry	 (Auto)
Fan	 (Low),  (Med),  (High)
Heat	 (Auto),  (Low),  (Med),  (High)

Basic operation



Selecting air flow direction

 This function allows you to shift the air flow direction up and down or left and right.

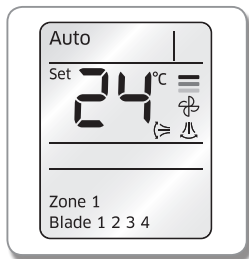Press the  or  button to move the air flow direction up and down or left and right while the air conditioner is turned on.



Remote controller display

 
- ▶ When the blade reaches the desired position, press the  or  button one more time to set the air flow direction. The up/down and left/right tilting of the blade will stop.
- * Duct type model cannot adjust air flow direction up and down.

Setting the On/Off timer

You can set the air conditioner to be turned on or off automatically at desired time.

Setting the On timer

When the air conditioner is turned off.

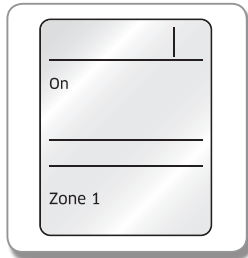

Remote controller display

1. Press the **Timer** button to select (On).
 - (On) indicator will keep blinking and you can set the time.
2. Press the < or > button to set the time.
 - You can set the time in half hour unit from 30 minutes (0.5 on the display) ~ 3 hours and hour unit from 3 ~ 24 hours.
 - Time can be set from minimum 30 minutes to maximum 24 hours.
3. Press the **SET** button to complete the On timer setting.
 - (On) indicator and the set time of the timer will be displayed on the remote controller display.
 - On timer setting will be cancelled if you don't press the **SET** button within 10 seconds after setting the time. Therefore, check for the (On) indicator on the remote controller display.

Cancel

▶ Press the **Timer** button → select (On) → press the < or > button → set the timer to → press the **SET** button.

Additional options available in On timer

	Select the mode from (Auto) → (Cool) → (Dry) → (Fan) and → (Heat). ※ Heat mode operates with MR-EH00/MR-EH00U model only.
	You can adjust the temperature after timer setting is completed. Temperature adjustment is only available in Auto/Cool/Dry/Heat mode. In Fan mode, temperature cannot be adjusted. ※ Heat mode operates with MR-EH00/MR-EH00U model only.

 


- When On timer setting is completed, the set status will be displayed for 3 seconds, and then only (On) indicator will remain on the remote controller display thereafter.
- You cannot set the Fan speed when setting the On timer.

Setting the On/Off timer

Setting the Off timer

When the air conditioner is turned on

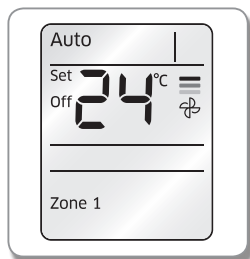

Remote controller display

1. Press the **Timer** button to select (Off).
 - (Off) indicator will keep blinking and you can set the time.
2. Press the < or > button to set the time.
 - You can set the time in half hour unit from 30 minutes (0.5 on the display) ~ 3 hours and hour unit from 3 ~ 24 hours.
 - Time can be set from minimum 30 minutes to maximum 24 hours.
3. Press the **SET** button to complete the Off timer setting.
 - (Off) indicator and the set time of the timer will be displayed on the remote controller display.
 - Off timer setting will be cancelled if you don't press the **SET** button within 10 seconds after setting the time. Therefore, check for the (Off) indicator on the remote controller display.

Cancel ▶ Press the **Timer** button → select (Off) → press the < or > button → set the timer to 0.0 → press the **SET** button.



- Only the latest setting timer will be applied between the Off Timer and good' sleep off timer functions.

Combining On timer and Off timer

When the air conditioner is turned off	When the air conditioner is turned on
When set time on On timer is shorter than Off timer e.g. On timer: 3 hours, Off timer: 5 hours <ul style="list-style-type: none"> • The air conditioner will be turned on after 3 hours from the moment you have set the timer and the air conditioner will remain on for 2 hours and then be turned off automatically. 	When set time on On timer is longer than Off timer e.g. On timer: 3 hours, Off timer: 1 hour <ul style="list-style-type: none"> • The air conditioner will be turned off after 1 hour from the moment you have set the timer and will be turned on after 2 hours from the moment it was turned off.

 


- Set time for the On timer and the Off timer should be different from each other.
- When the On timer or the Off timer is set, setting can be cancelled by pressing the **Power** button.

Setting the good'sleep mode

For a comfortable sleep, the air conditioner will operate in 3 stages in order of 'Fall asleep ▷ Sound sleep ▷ Wake up' stages.

When the air conditioner is operating in Cool mode;

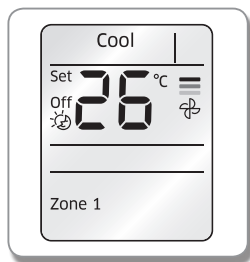

Remote controller display

1. Press the **Timer** button to select (⌚).
- (⌚) indicator will keep blinking and you can set the time.
2. Press the < or > button to set the time.
- You can set the time in half hour unit from 30 minutes (0.5 on the display) ~ 3 hours and hour unit from 3 ~ 12 hours.
- Time can be set from minimum 30 minutes to maximum 12 hours.
- Default time setting for the good'sleep mode is 8 hours.
3. Press the **SET** button to complete the good'sleep mode setting.
- (⌚) indicator and the set time of the good'sleep mode will be displayed on the remote controller display.
- good'sleep mode will be cancelled if you don't press the **SET** button within 10 seconds after setting the time. Therefore, check for the (⌚) indicator on the remote controller display.

Cancel ▶ Press the **Timer** button → select (⌚) → press the < or > button → set the timer to 0:00 → press the **SET** button.

Additional options available in good'sleep mode



Temperature can be adjusted by 1 °C(1 °F) within the range of 18 °C(65 °F)~30 °C(86 °F).

Setting the good'sleep mode

Temperature and Fan speed change in good'sleep mode

1. Fall asleep mode : Provides you with comfortable environment for a good sleep by rapid cooling and hypnagogue expedition breeze.
2. Sound sleep mode : The sound sleep mode adjusts temperature and air flow in waves to maintain healthy skin temperature while it aids deep sleep. According to the change of good'sleep operation hours, the sound sleep hour can be longer or shorter.
3. Wake up from good'sleep mode : Provides you with the air flow that adjusts your body temperature to wake you up in a fresh status.



 
NOTE

- In good'sleep mode, the air conditioner will operate in Cool + () mode for first 30 minutes. Fan speed and the air flow direction will be adjusted automatically in good'sleep mode.
- Recommended set temperature is between 25 °C(77 °F) ~ 27 °C (81 °F) and 26 °C(79 °F) is the most ideal temperature.
- If the set temperature is too low, you may feel cold during sleep or catch a cold.
- Optimal operation hour of good'sleep mode is 8 hours. Therefore, if the time is set too short or long, you may not feel as comfortable as you would expect.
- If the good'sleep mode is set over 5 hours, Wake up stage will begin when 1 hour is remaining in the operation time and the air conditioner will stop automatically.
- When the On timer and the good'sleep mode are set simultaneously, the air conditioner will only apply the function that was set later.
- While good'sleep mode is operating, mode can be set additionally by pressing the **Options** button.
- If you press the **Options** button and select the Turbo/Quiet function, the good'sleep mode will be cancelled and the selected mode will begin operation.
- If you press the **Mode** button, the good'sleep mode will be cancelled and the selected mode will begin operation.

Using the Turbo function

You can set the Turbo function to provide fast and powerful cooling (heating).

When the air conditioner is operating in Cool or Heat mode;

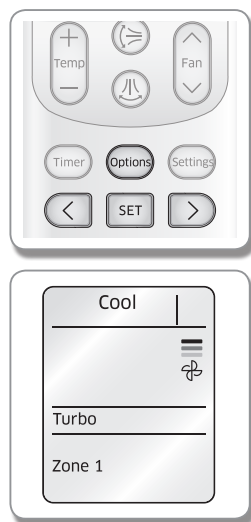

Remote controller display

1. Press the **Options** button.
2. Press the <, > or **Options** button until (Turbo) indicator starts to blink.
3. Press the **SET** button to set the Turbo function.
 - (Turbo) → (Turbo) indicator will be displayed on the remote controller display and Turbo function will operate for 30 minutes.

Cancel ▶ Press the **Options** button → press the <, > or **Options** button to make the (Turbo) indicator blink and press the **SET** button.

 


- Turbo function is only available in Cool/Heat mode.
- * Heat mode operates with MR-EH00/MR-EH00U model only.
- If the Turbo function is selected while Quiet function is on, the Quiet function will be cancelled.
- Air flow direction can be adjusted with every direction.
- * Duct type model cannot adjust air flow direction up and down.
- Temperature and fan speed cannot be adjusted.

Using the Purity function

Purity function will remove harmful materials in the air to provide you clean and healthy environment. You can select this function additionally while the air conditioner is in operation.

When the air conditioner is turned on

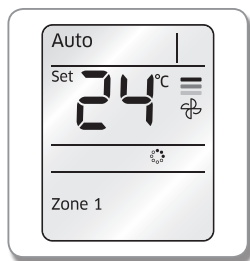

Remote controller display

1. Press the **Options** button.
2. Press the <, > or **Options** button until () indicator starts to blink.
3. Press the **SET** button to set the Purity function.
 - () → () indicator will be displayed on the remote controller display and Virus Doctor function will begin.

 
Cancel

- Press the **Options** button → press the <, > or **Options** button to make the () indicator blink and press the **SET** button.



- You may select the purity function additionally during Auto/Cool/Dry/Heat mode and you can adjust the temperature.
- * Heat mode operates with MR-EH00/MR-EH00U model only.
- If the purity function is selected additionally in fan mode, the temperature cannot be adjusted.
- When the air conditioner and the purity function are turned on simultaneously and you press the **Power** button, both air conditioner and purity function will stop operation.
- You can still use the purity function when the On timer is set with the air conditioner is turned off.
- There will not be much difference on energy consumption and operating noise when the purity function is selected additionally while the air conditioner is turned on.

When the air conditioner is turned off

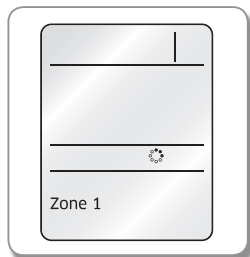

Remote controller display

1. Press the **Options** button.
2. Press the **SET** button when () indicator blinks to begin purity function.
 - () → () indicator will be displayed on the remote controller display and Virus doctor function will begin.

 
Cancel

- Press the **Options** button to make the () indicator blink and press the **SET** button.

Using the Quiet function

You can reduce the noise generated from the indoor unit during Cool/Heat mode.

When the air conditioner is operating in Cool or Heat mode;

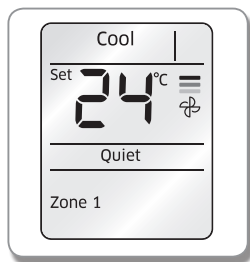

Remote controller display

1. Press the **Options** button.
2. Press the <, > or **Options** button until (Quiet) indicator starts to blink.
3. Press the **SET** button to set the Quiet function.
 - (Quiet) → (Quiet) indicator will be displayed on the remote controller display and Quiet function will begin.

Cancel ▶ Press the **Options** button → press the <, > or **Options** button to make the (Quiet) indicator blink and press the **SET** button.

Additional options available in Quiet function

	<p>In Cool mode Temperature can be adjusted by 1 °C(1 °F) within the range of 18 °C(65 °F) ~ 30 °C(86 °F).</p> <p>In Heat mode Temperature can be adjusted by 1 °C(1 °F) within the range of 16 °C(61 °F) ~ 30 °C(86 °F). ※ Heat mode operates with MR-EH00/MR-EH00U model only.</p>
	<p>Fan speed is set to (Auto).</p>
	<p>Air flow direction can be adjusted.</p>



NOTE

- Quiet function can be set only in Cool/Heat mode and if the Quiet function is selected while Turbo function is on, the Turbo function will be cancelled.

※ Heat mode operates with MR-EH00/MR-EH00U model only.

 
Selecting an indoor unit

You can select and operate individual indoor units out of 4 indoor units.

When the air conditioner is turned on



1. Press the **Settings** button.
2. Press the <, > or **Settings** button until (Zone) indicator starts to blink.
3. Press the **SET** button to select the indoor unit you want to operate.
 - You can select individual units in order (1~4) or select all indoor units at one time.

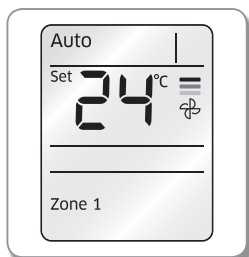

Remote controller display

Selecting a blade

You can select and operate individual blades out of 4 blades.

 
When the air conditioner is turned on



1. Press the button.
 - Blade 1234 will be displayed.
2. Press the **Settings** button.
3. Press the <, > or **Settings** button until (Blade) indicator starts to blink.
4. Press the **SET** button to select the blade you want to operate.
 - You can select the individual blades in order (1~4) or select all blades at one time.



- To cancel the selected blade, press the button.
- When selecting the blade individually, button will not work.

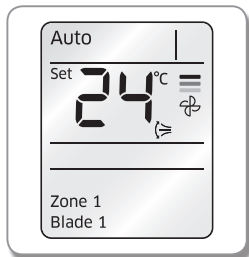

Remote controller display

Appendix

Detailed control specification of a remote controller by each indoor unit frame

Classification	Console2 (SOC)	EEV-RAC	DVM Master N	JSF2
Up and down swing	Supported	Supported	Supported	Supported
Left and right swing	Not supported	Not supported	Not supported	Supported
Quiet	Not supported	Not supported	Not supported	Not supported
good' sleep	Not supported	Supported	Supported	Supported
Turbo	Not supported	Supported	Supported	Supported
Purity	Supported	Not supported	Not supported	Supported
Individual blade control	Not supported	Not supported	Not supported	Not supported
Multi channel (Indoor unit selection)	Supported	Supported	Supported	Supported
Beep	Supported	Not supported	Not supported	Not supported
Forced trial operation	Not supported	Not supported	Not supported	Not supported
Refrigerant amount detection	Not supported	Not supported	Not supported	Not supported

Classification	Console [Inverter]	Global_4way [Inverter]	Slim_1way_SPI_Add [Inverter]	G_Mini4way [Inverter]
Up and down swing	Supported	Supported	Supported	Supported
Left and right swing	Not supported	Not supported	Not supported	Not supported
Quiet	Not supported	Not supported	Not supported	Not supported
good' sleep	Not supported	Not supported	Supported	Not supported
Turbo	Not supported	Not supported	Not supported	Not supported
Purity	Supported	Supported	Supported	Supported
Individual blade control	Not supported	Supported	Not supported	Supported
Multi channel (Indoor unit selection)	Supported	Supported	Supported	Supported
Beep	Supported	Supported	Not supported	Supported
Forced trial operation	Not supported	Not supported	Not supported	Not supported
Refrigerant amount detection	Not supported	Not supported	Not supported	Not supported

Appendix

Detailed control specification of a remote controller by each indoor unit frame

Classification	Big Duct [Inverter]	C-RAC [Inverter]	Duct [Inverter]	JSF2 [Inverter]
Up and down swing	Not supported	Supported	Not supported	Supported
Left and right swing	Not supported	Not supported	Not supported	Supported
Quiet	Not supported	Not supported	Not supported	Supported
good' sleep	Not supported	Supported	Not supported	Supported
Turbo	Not supported	Not supported	Not supported	Supported
Purity	Not supported	Not supported	Not supported	Supported
Individual blade control	Not supported	Not supported	Not supported	Not supported
Multi channel (Indoor unit selection)	Supported	Supported	Supported	Supported
Beep	Not supported	Not supported	Not supported	Not supported
Forced trial operation	Not supported	Not supported	Not supported	Not supported
Refrigerant amount detection	Not supported	Not supported	Not supported	Not supported

Classification	Ceiling BLDC [Inverter]	Global_4way Cooling only constant velocity type	Slim_1way Cooling only constant velocity type	2way
Up and down swing	Supported	Supported	Supported	Supported
Left and right swing	Not supported	Not supported	Not supported	Not supported
Quiet	Not supported	Not supported	Not supported	Not supported
good' sleep	Not supported	Not supported	Supported	Not supported
Turbo	Not supported	Not supported	Not supported	Not supported
Purity	Not supported	Supported	Supported	Supported
Individual blade control	Not supported	Supported	Not supported	Not supported
Multi channel (Indoor unit selection)	Supported	Supported	Supported	Supported
Beep	Supported	Supported	Not supported	Supported
Forced trial operation	Not supported	Not supported	Not supported	Not supported
Refrigerant amount detection	Not supported	Not supported	Not supported	Not supported

Classification	Ceiling	Mini4way	Slim1way	Big Slim1way
Up and down swing	Supported	Supported	Supported	Supported
Left and right swing	Not supported	Not supported	Not supported	Supported
Quiet	Not supported	Not supported	Not supported	Not supported
good' sleep	Not supported	Not supported	Supported	Supported
Turbo	Not supported	Not supported	Not supported	Supported
Purity	Not supported	Not supported	Supported	Supported
Individual blade control	Not supported	Not supported	Not supported	Not supported
Multi channel (Indoor unit selection)	Supported	Supported	Supported	Supported
Beep	Supported	Not supported	Supported	Supported
Forced trial operation	Not supported	Not supported	Not supported	Not supported
Refrigerant amount detection	Not supported	Not supported	Not supported	Not supported

Classification	Console	NeoForte	DVM Q	Super
Up and down swing	Supported	Supported	Supported	Not supported
Left and right swing	Not supported	Not supported	Supported	Not supported
Quiet	Not supported	Not supported	Not supported	Not supported
good' sleep	Not supported	Supported	Not supported	Not supported
Turbo	Not supported	Supported	Not supported	Supported
Purity	Supported	Not supported	Not supported	Not supported
Individual blade control	Not supported	Not supported	Not supported	Not supported
Multi channel (Indoor unit selection)	Supported	Supported	Supported	Supported
Beep	Not supported	Supported	Supported	Supported
Forced trial operation	Not supported	Not supported	Not supported	Not supported
Refrigerant amount detection	Not supported	Not supported	Not supported	Not supported